Beretta

Caliber .22 L.R.

- Parts List
- Instructions
- Maintenance
- Specifications

New Jaguar Pistol

Armi Beretta S.p.A. - 25063 Gardone Valtrompia, Brescia (Italy)

SOLE U.S.A. DISTRIBUTOR: J. L. GALEF AND SONS, INC., NEW YORK

New Jaguar Beretta .22 L.R. Caliber - mod.101

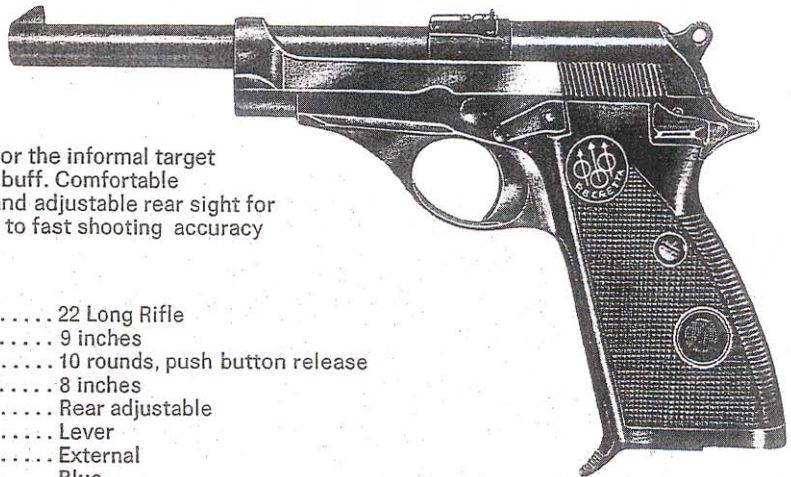

The ideal general purpose pistol for the informal target shooter, hunter, camper or range buff. Comfortable wrap-around grips, target barrel and adjustable rear sight for windage and elevation contribute to fast shooting accuracy

Specifications:

Caliber	22 Long Rifle
Barrel	9 inches
Magazine	10 rounds, push button release
Length Overall	8 inches
Sights	Rear adjustable
Safety	Lever
Hammer	External
Finish	Blue
Weight	App. 22 ounces
Stock	Two piece wrap-around, checkered
Slide	Stays open on last shot

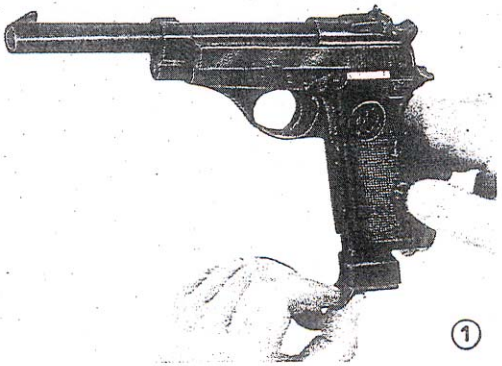

①

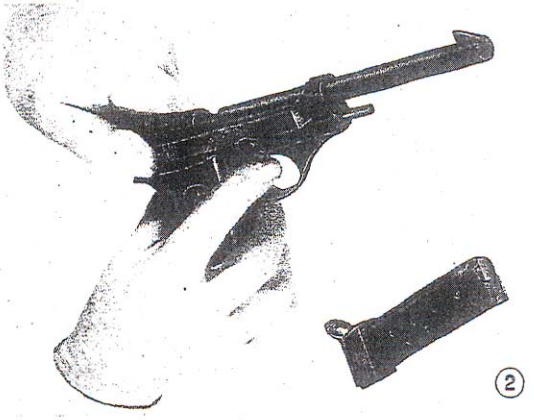

②

1 - Remove the magazine by depressing the release button (Figure 1).

2 - Pull slide back fully and check chamber for loaded round. (Carefully cock hammer first in order to ease backward movement).

3 - Holding the pistol in the right hand, pull slide to the rear and align slide lock with recess in slide. (Figure 2).

4 - With the right thumb, rotate slide lock toward the muzzle.

5 - Pull slide forward and remove from the frame. (Figure 3). (Should it be difficult to rotate slide lock, tap barrel muzzle on a wooden surface two or three times in order to relieve pressure between slide lock and barrel lug. If you should encounter further difficulty, pull slide back as far as possible and release several times in order to ease forward motion).

③

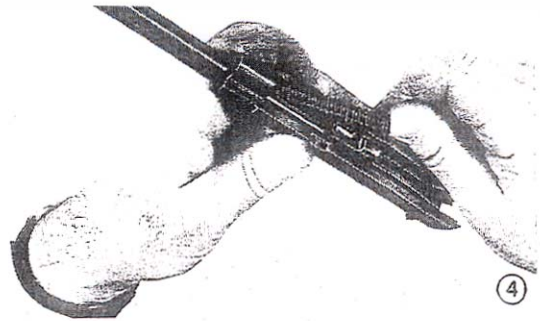

④

6 - In order to remove barrel from the slide assembly, release recoil spring and guide. (Spring and guide are under tension . . . remove carefully). The barrel may now be withdrawn through the underside of the slide (Fig. 4).

7 - No further disassembly is recommended except by a competent gunsmith.

8 - Assemble in reverse order.

TAKE CARE OF YOUR GUN, IT WILL LAST LONGER AND YOU WILL GET THE BEST RESULTS. KEEP IT CLEAN AND LUBRICATED THROUGHOUT. AFTER EACH FIRING, CLEAN BARREL TO AVOID OXIDATION.

BERETTA

NEW JAGUAR BERETTA .22 L.R. CALIBER - MOD. 101

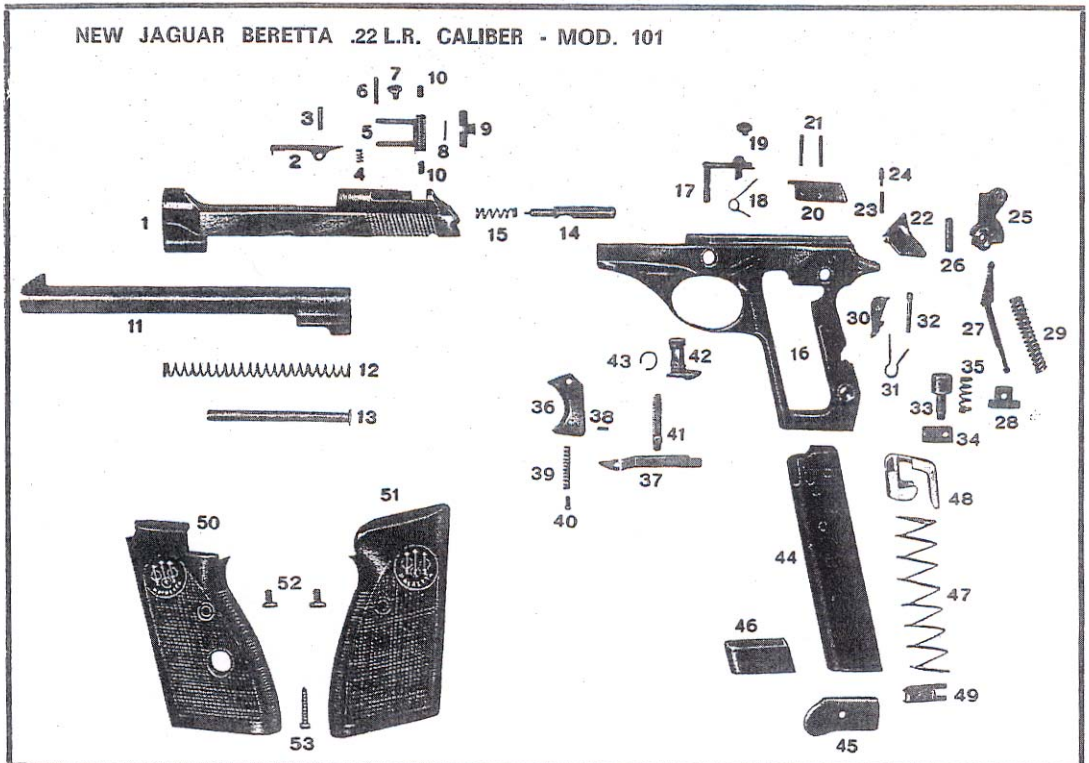

COMPONENT PARTS — NEW JAGUAR BERETTA .22 L.R. CALIBER - MOD. 101

1 - Slide
2 - Extractor
3 - Extractor pin
4 - Extractor spring
5 - Rear sight base
6 - Rear sight pin
7 - Rear sight screw
8 - Notch pin
9 - Notch
10 - Notch adjusting screw
11 - Barrel
12 - Recoil spring
13 - Recoil spring guide
14 - Firing pin
15 - Firing pin spring
16 - Frame
17 - Slide catch
18 - Slide catch spring
19 - Slide catch screw
20 - Ejector
21 - Ejector pin (2)
22 - Safety
23 - Safety spring
24 - Safety spring plunger
25 - Hammer
26 - Hammer pin
27 - Hammer strut
28 - Hammer strut nut
29 - Hammer spring
30 - Sear
31 - Sear spring
32 - Sear pin
33 - Magazine release button
34 - Magazine release
35 - Magazine release spring
36 - Trigger
37 - Trigger bar
38 - Trigger pin
39 - Trigger bar spring
40 - Trigger bar spring plunger
41 - Disconnector
42 - Slide lock
43 - Slide lock circlip
44 - Magazine box
45 - Magazine bottom
46 - Spacer
47 - Magazine spring
48 - Magazine follower
49 - Magazine bottom plate
50 - Left grip
51 - Right grip
52 - Grip screw (2)
53 - Grip securing screw